

## Guidelines for changing password for MODEM or Broad Band ADSL router

(Demo. for Binatone Modem . In this case password is available on the rear side of the modem

e.g. User name as **admin** and password is **0178569** )

1. Enter **http:// 192.168.1.1** in the browser.

2. Enter User name and password in the given field .

e.g. User name as **admin** and password as **0178569**

Modem page will be displayed .

3. Click on **Maintenance** tab

4. Enter **New password** as alphanumeric characters and repeat same in **confirm password**  
**In the** given Fields.

e.g. New password as **xyz1249&\*N** and Conform password as **xyz1249&\*N**

5. click on **save** .

Page will be displayed for authorization required.

Delete user Name and reenter user Name **admin**

Enter password **xyz1249&\*N** in the given field .

6. click on **OK**

7. Click on **SysRestart** tab then click on **RESTART** tab

Message will be displayed as “ **The system is restarting . please wait ....**”

Enter again changed password **xyz1249&\*N** in the given field.

Switch of the modem and restart again.

Pl. note : for confirmation check up again for entered new password ..

Follow the step 1 and 2 again. modem page will be displayed means password is changed successfully.

## Type of Modem having Gateway IP address , Username and Password

Type of Modem	Gateway IP Address	Username	Password
Alphion ONT	192.168.1.251	root	admin
Cell Pipe 7136	192.168.2.1	admin	admin
Zyxel VMG 1312	192.168.1.1	admin	1234
ARGT 1000	192.168.1.1	admin	admin
DNA8201	192.168.1.1	admin	admin
Smartx MT882 (Huwai)	192.168.1.1	admin	admin
UT Star	192.168.1.1	admin	admin
Beetel 450TC-1	192.168.1.1	admin	admin
Binatone DM856W	192.168.1.1	admin	bottom of Modem